


Construïr en balle

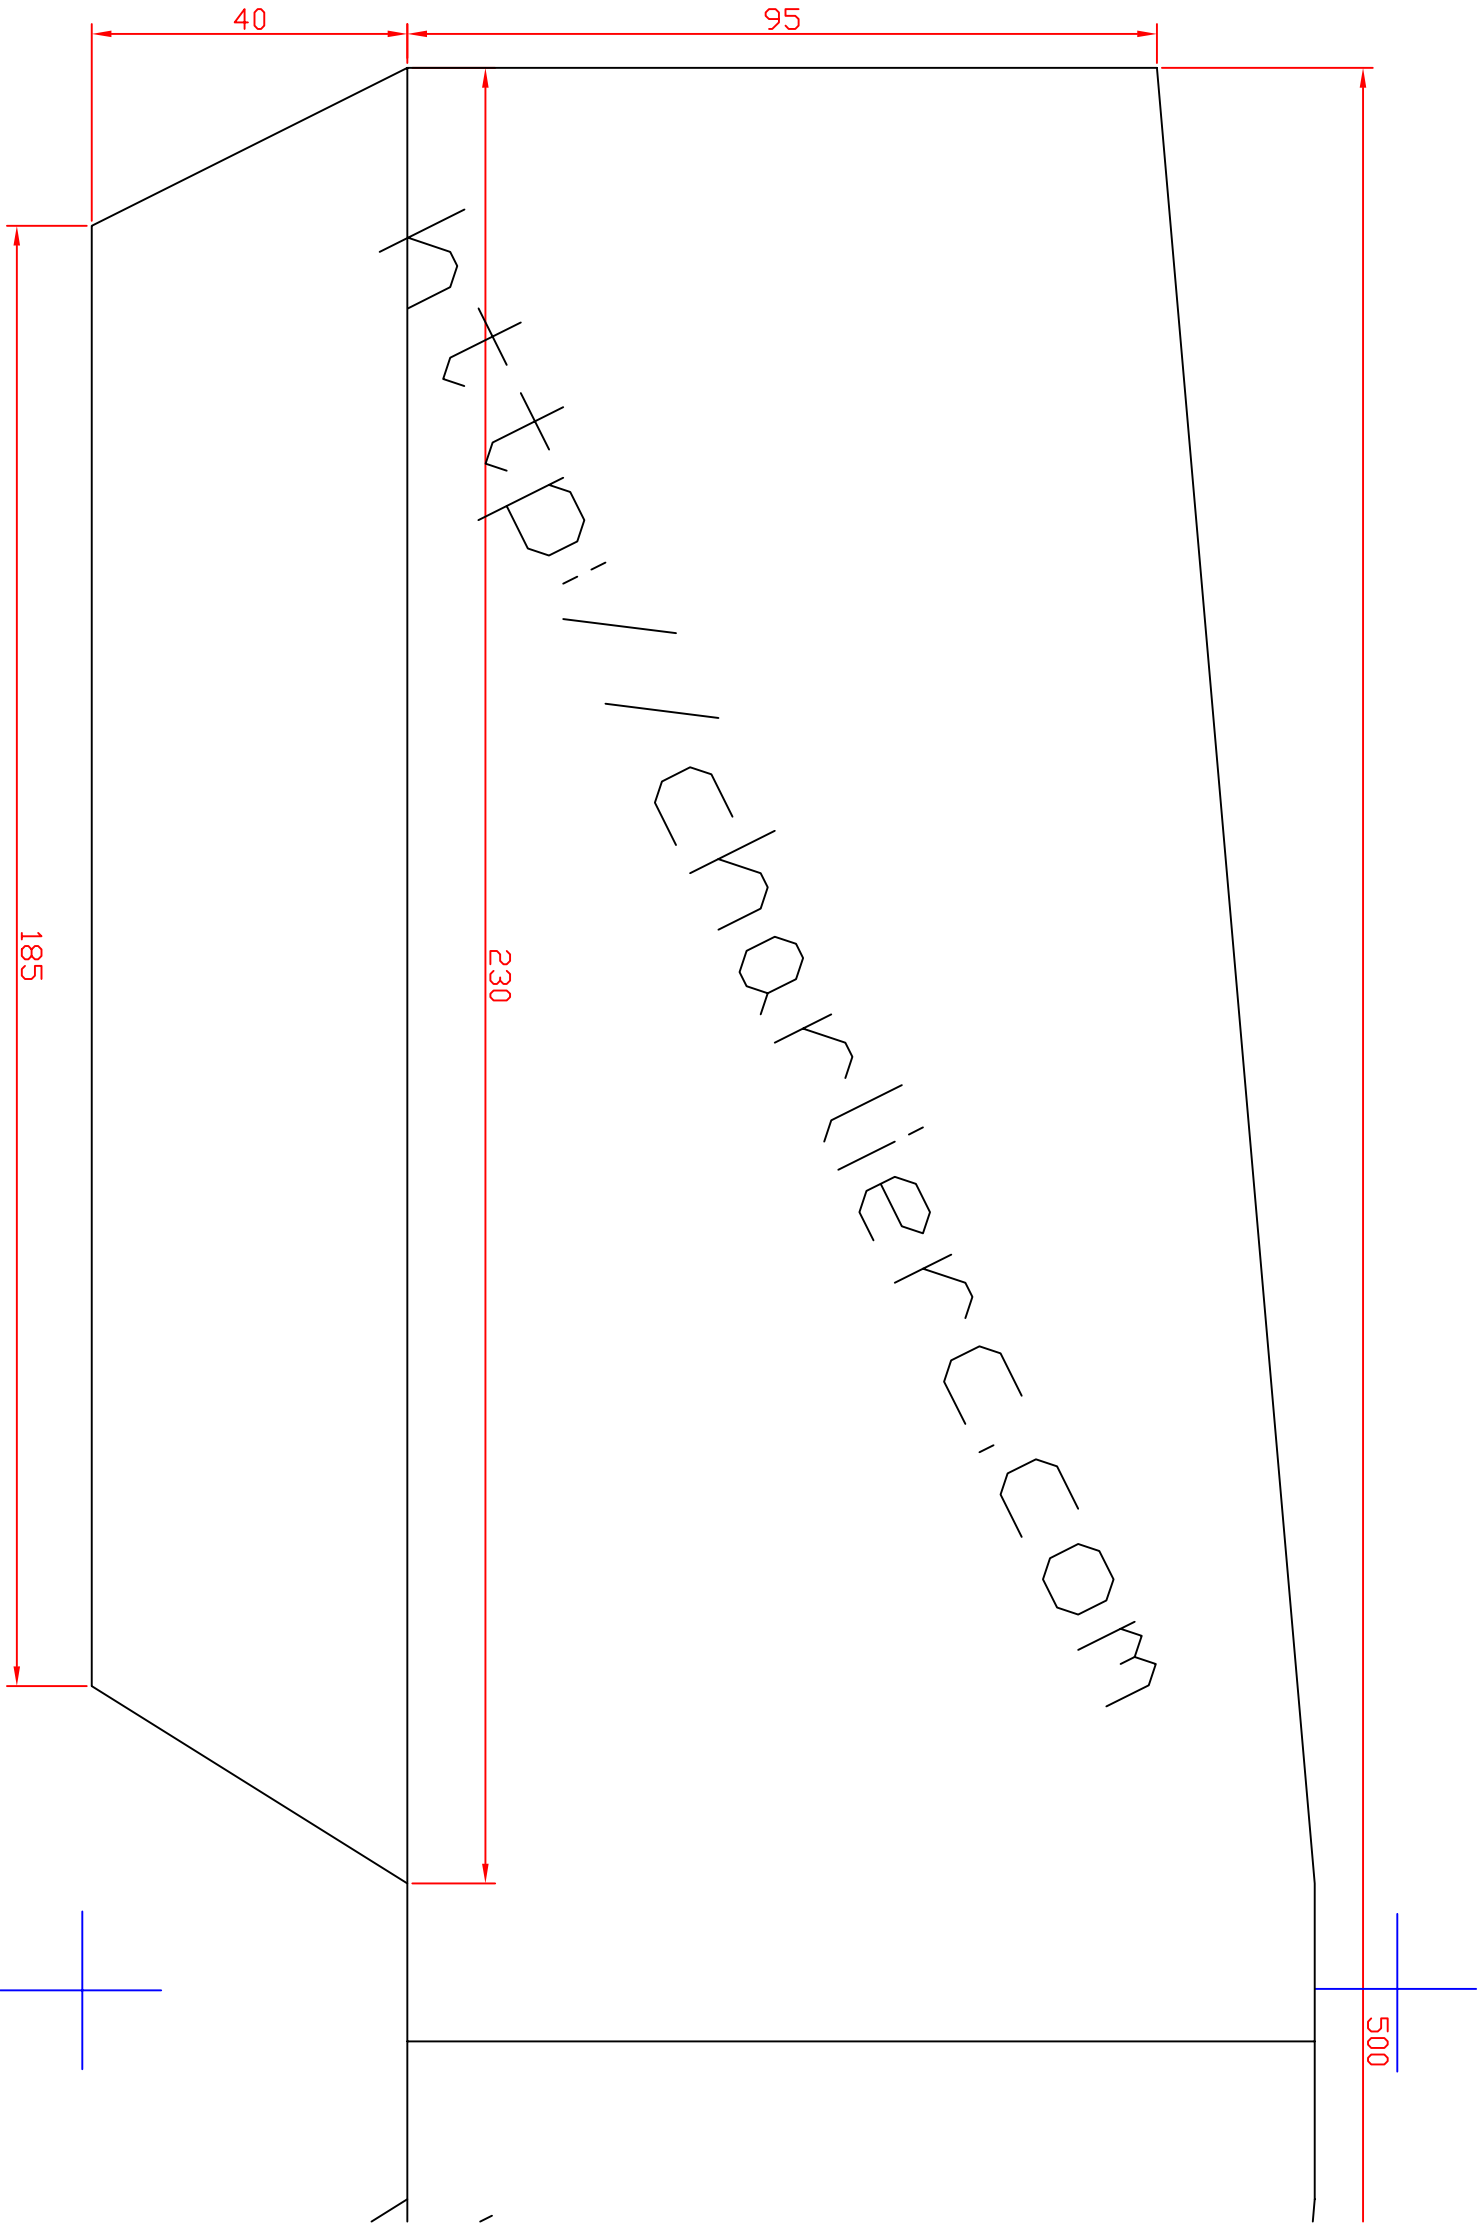

truir en balsa de 5mm

500

WATERPROOF
SNOOKERLEER
500MM

